

RE-PRESSURIZING YOUR
AQUA  **Mate**™
PORTABLE WATERING MACHINE

The air pressure in your watering machine should be 12 - 14 PSI.

If your watering machine is not filling or emptying properly, you would need to re-pressurize the unit as follows:

- ⇒ Open Ball Valve to empty water from the tank
- ⇒ Close Ball Valve
- ⇒ Remove the air valve cap on top of the tank to reveal the air stem
- ⇒ Increase air pressure to 40 PSI
- ⇒ Open Ball Valve again to release any additional water from the tank
- ⇒ Close Ball Valve
- ⇒ Lower the air pressure to the recommended 12 - 14 PSI



Division of American Granby
7652 Morgan Road
Liverpool, New York 13090
Phone: (800) 726-9889
Fax: (800) 677-2282
www.aqua-matics.com